

Hydromist Compact User Guide




THIS USER GUIDE SHOULD ALWAYS BE USED IN CONJUNCTION WITH THE USER MANUAL

1. Assembling the machine



In your Hydromist Compact box you should receive the following items:

- A Hydromist Compact machine
- Two handle knobs

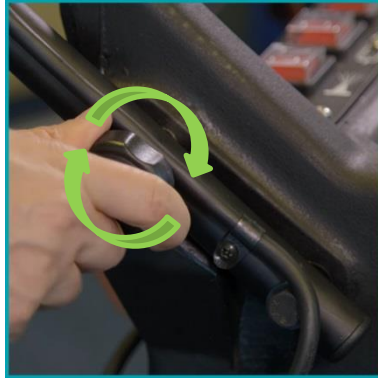

To assemble the machine, screw the two handle knobs into the side of the machine.


2. Preparing the machine



Remove the vacuum hose.



Take off the recovery tank.

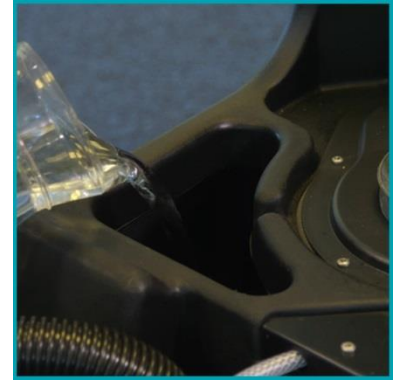

Fill the solution tank with mixed water and approved cleaning chemical according to the chemical manufacturer's instructions. Warm water can be used to aid cleaning, however this can increase the risk of colours fading and carpets to shrink. If required, add defoamer solution as per manufacturer's instructions.



Replace the recovery tank and secure in position.



Reconnect the vacuum hose.

3. Using the machine



Fully unwind the supply cord and plug into a convenient socket outlet.



Switch on the vacuum motor and brush drive switches.



Operate the spray lever on the handle to dispense the cleaning solution, whilst pulling the machine slowly backwards to clean the carpet. Stop spraying cleaning solution about 30cm before end of cleaning pass to ensure all solution is vacuumed up.




Wheel the machine forward and repeat, slightly overlapping the previous pass. Do not clean any area more than twice, or overwetting could result in carpets shrinking.



After a few passes, check the waste tank to see that no foam is present. Add extra defoamer if necessary.



Make sure to empty the recovery tank when it is approximately $\frac{3}{4}$ full. Do not refill the solution tank without emptying all the contents of the recovery tank first.

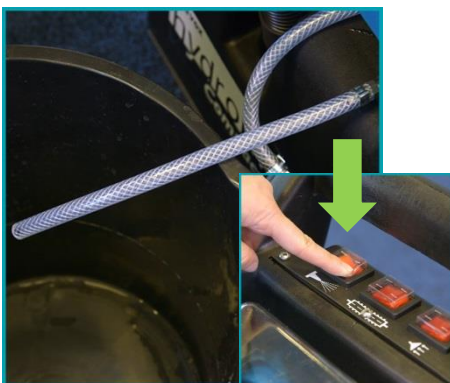


When solution spray ceases the solution tank is empty. Switch off the machine, empty the recovery tank and refill the solution tank.

4. Using the optional upholstery tools




Pull out the vacuum hose from the recovery tank and connect the accessory vacuum hose.

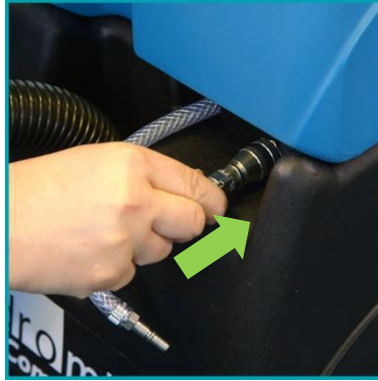


Disconnect the solution hose from the connector on the front of the machine and connect the accessory solution hose to the machine.



Connect the other end of the accessory to the upholstery tool.

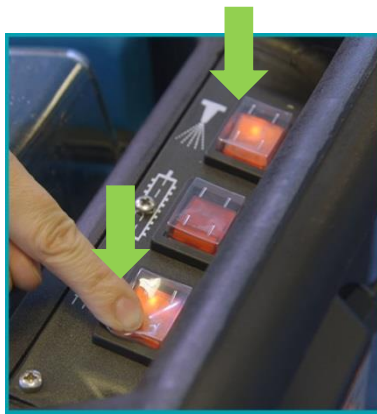

Switch on the accessory spray and vacuum switch button.

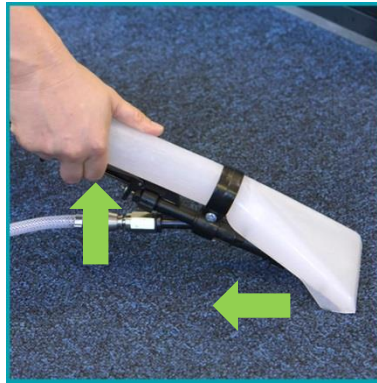

Operate the spray lever on the handle to dispense the cleaning solution whilst pulling the upholstery tool or wand backwards.

5. After use and storage



After use and before storage we recommend running the vacuum motor for approximately 2 minutes to allow residual water in the system to be fully sucked into the recovery tank.



Ensure all switches are in the off position.



To drain the recovery tank disconnect the vacuum hose and lift off the recovery tank.




Remove the transparent cover and empty the dirty water. Rinse out the tank with clean water to remove dirt and sediment and replace the tank.



To drain the solution tank, remove the drain hose from the back of the machine, then disconnect the solution hose from the connector and fit the drain hose in its place.



Direct the free end of the hose into a bucket and switch on the accessory spray switch. This will drain any remaining solution.

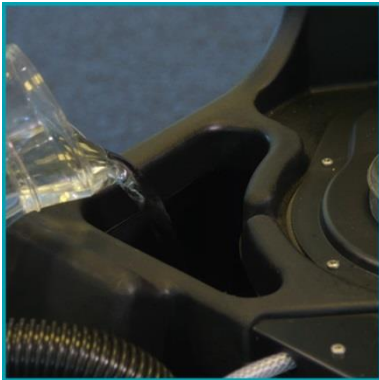

Add approx. ½ litre of clean water to solution tank and drain to flush out the tank and pump.




Remove the drain hose and replace it at the back of the machine and replace the solution hose at the front of the machine.



Switch OFF all switches.



Unplug the machine.

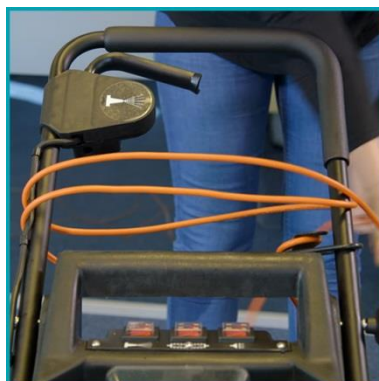

Wrap the supply cord around the handle, ensuring that the plug is not trailing on the floor.



Regularly check the filter by unscrewing the filter, and rinsing out any dirt or debris.



Refit the filter with the screws, replace the transparent cover and replace the recovery tank.



Wipe down the machine, including the underside of the machine. Check the vacuum and brush for any debris.



Store machine with recovery tank lid removed. Store the machine in a dry indoor area only.