




# SPAREPARTS CATALOGUE

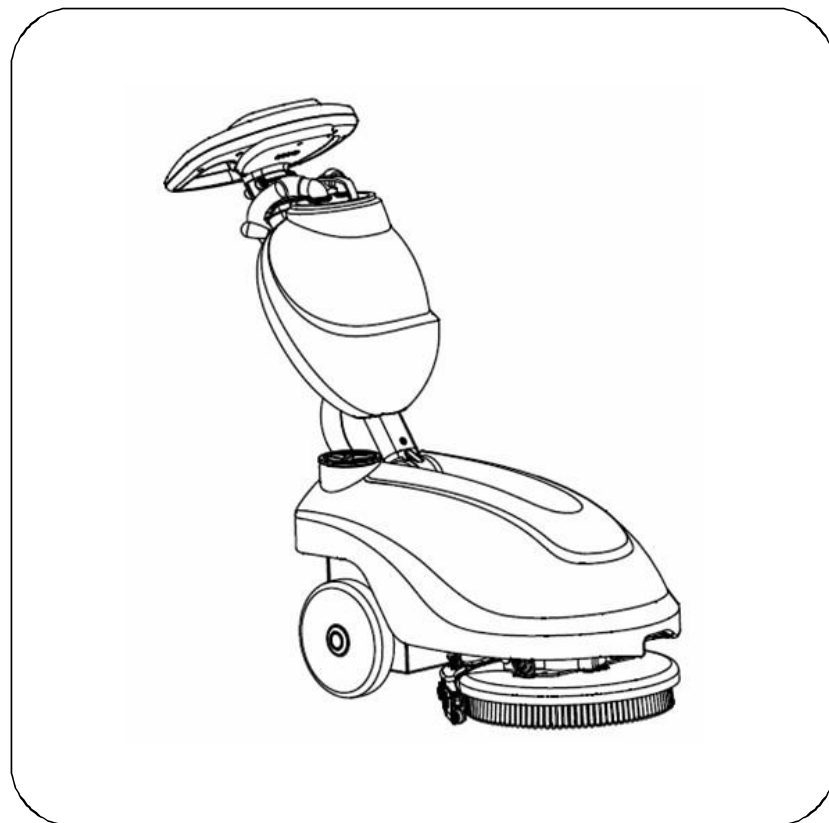


**KEDI GBZ-350B**

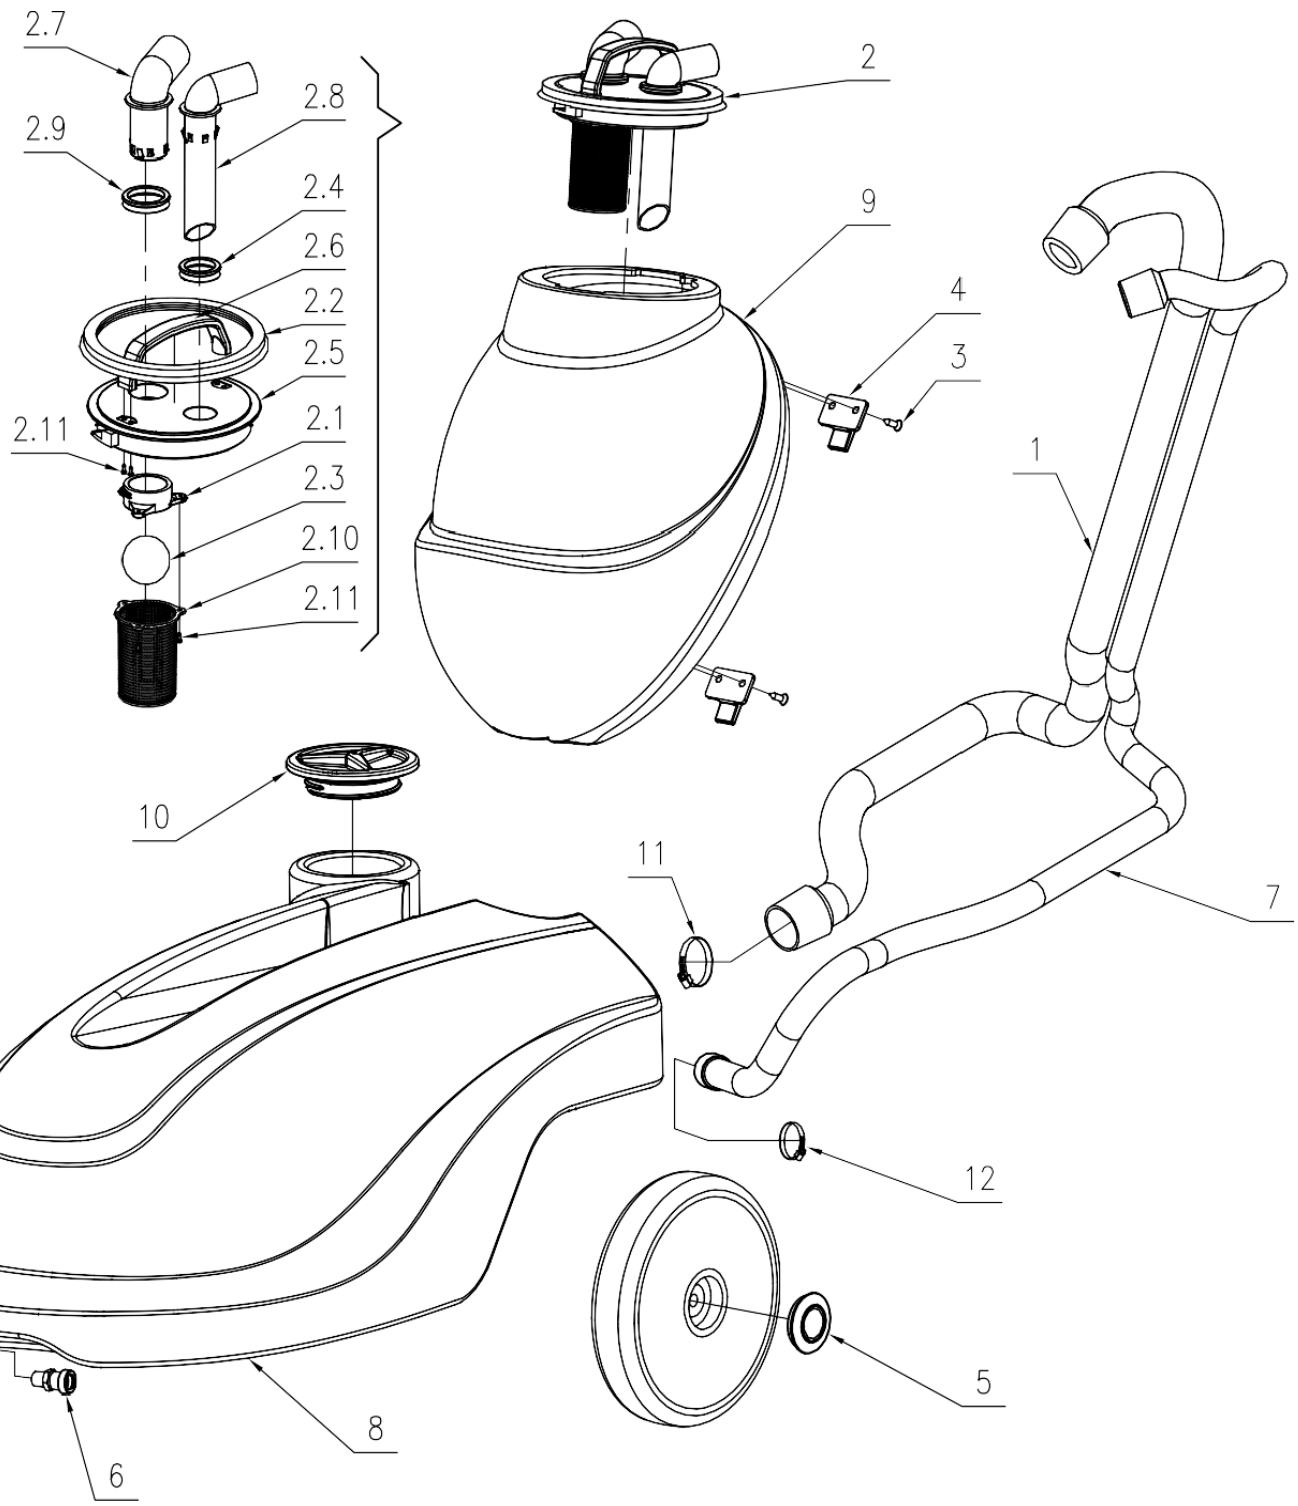


№	артикул	кол-во	наименование	прим.
12	350B-L04	1	clamp	22-38
11	350B-L03	1	clamp	27-51
10	350B-P52	1	solution cover	
9	350B-T02	1	recovery tank	
8	350B-T01	1	solution tank	
7	350B-P25	1	suction hose	
6	350B—P53	1	quick connector	1/4
5	350B—P23	2	wheel cover	
4	350B-AL06	2	hook	
3	CB/T 15856.1-2002	4	screw	ST4.75X15
2.11	CB/T 15856.1-2002	7	screw	ST2.9X10
2.10	350B-P35	1	filter	
2.9	350B-P31	1	gasket	
2.8	350B-P32	1	recovery elbow	
2.7	350B-P30	1	suction elbow	
2.6	350B-P29-1	1	handle	
2.5	350B-P29	1	recovery cover	
2.4	350B-P33	1	gasket	
2.3	35CB-P08	1	float	D38
2.2	530B-P13	1	gasket	
2.1	350B-P34	1	filter support	
2	350B-COVER	1	cover assembly	
1	350E-P24	1	suction hose	




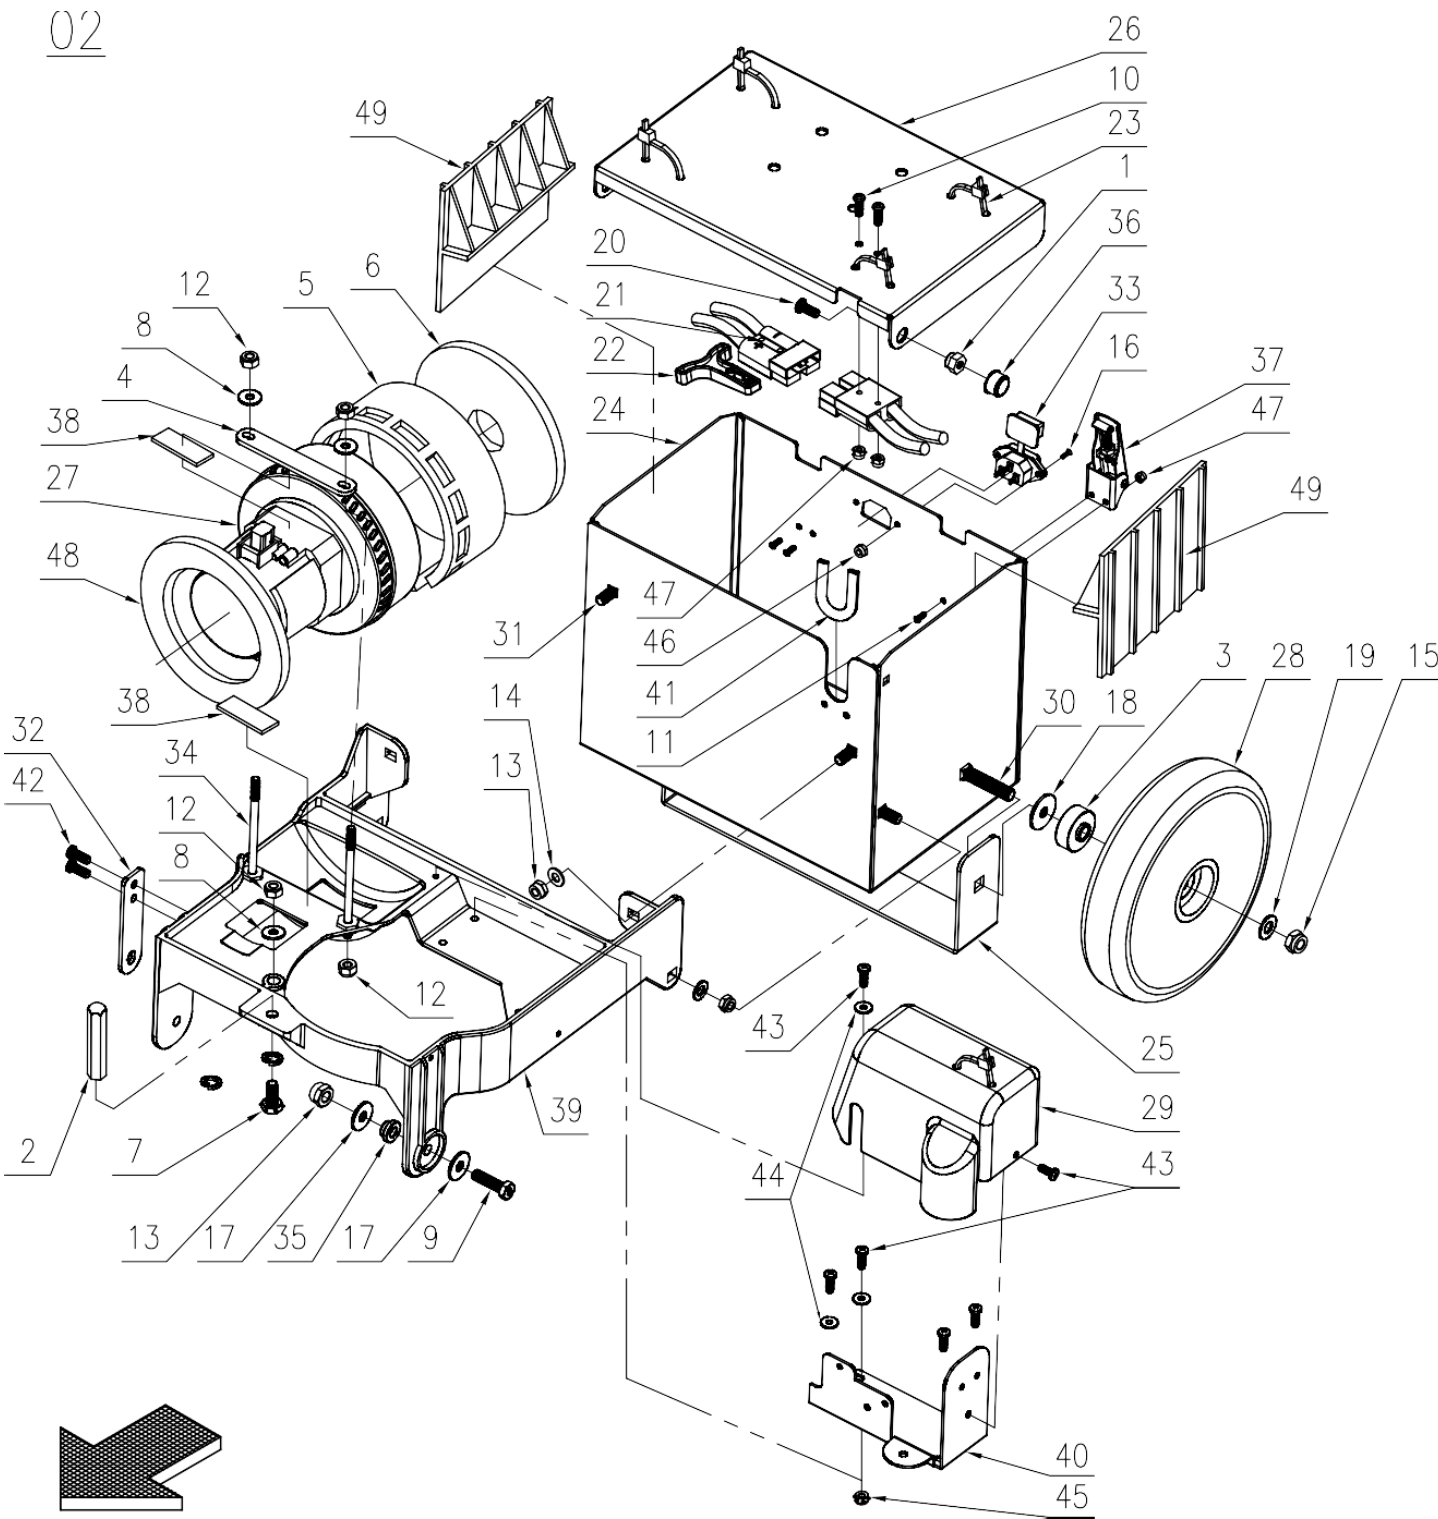


№	артикул	кол-во	наименование	примечание
48	350B-P39	1	sponge	
47	CB/T 928-1980	6	nut	M3
46	GB/T 928-1980	2	nut	M4
45	GB/T 928-1980	4	nut	M5
44	GB/T 97.1-2002	5	washer	Ø5.5XØ15X1
43	GB/T 818-2000	6	screw	M5X16
42	GB/T 818-2000	2	screw	M6X16
41	350B-P49	1	protect tape	
40	350B-MZ06	1	junction box	
39	350B-AL08	1	frame	
38	350B-P36	2	sponge	
37	350B-L02	2	hook	
36	350B-P09	2	cap	D15.5
35	530B-BR05	2	bushing	
34	GB/T 818-2000	2	screw	M6X110
33	350B-C11	1	charger socket	
32	350B-MZ12	1	support	
31	GB/T 14-1998	4	screw	M8X20
30	GB/T 14-1998	2	screw	M10X50
29	350B-P02	1	protect cover	
28	350B-W01	2	wheel	D200X42
27	350B-E02	1	vacuum motor	24V/370W
26	3503-M02	1	battery box cover	
25	350B-M03	1	support	
24	350B-M01	1	battery box	
23		5	cable tic	4X200
22		1	handle	
21		2	cable connector	
20	GB/T 14-1998	2	screw	M6X16
19	GB/T 97. 1-2002	2	washer	Ø10XØ21X1.5
18	GB/T 97. 1-2002	2	washer	Ø10.5XØ30X2
17	GB/T 97.1-2002	4	washer	Ø8.5XØ24X2
16	GB/T 818-2000	2	screw	M4X14
15	CB/T 928-1980	2	nut	M10
14	GB/T 97.1-2002	4	washer	Ø8XØ17X1.5
13	GB/T 928-1980	6	nut	M8
12	GB/T 928-1980	5	nut	M6
11	GB/T 819.1-2000	4	screw	M3X10
10	CB/T 9014. 5-2004	2	screw	M3X25
9	CB/T 5787-2000	2	screw	M8X30
8	GB/T 97.1-2002	3	washer	Ø6.5XØ18X1.5
7	CB/T 5783-2000	1	screw	M8X20
6	350B-P38	1	sponge	
5	3503-P37	1	sponge	
4	350B-MZ02	1	plaque	
3	350B-BR04	2	bushing	
2	350B-MZ08	1	support pin	
1	350B-BR02	2	bushing	

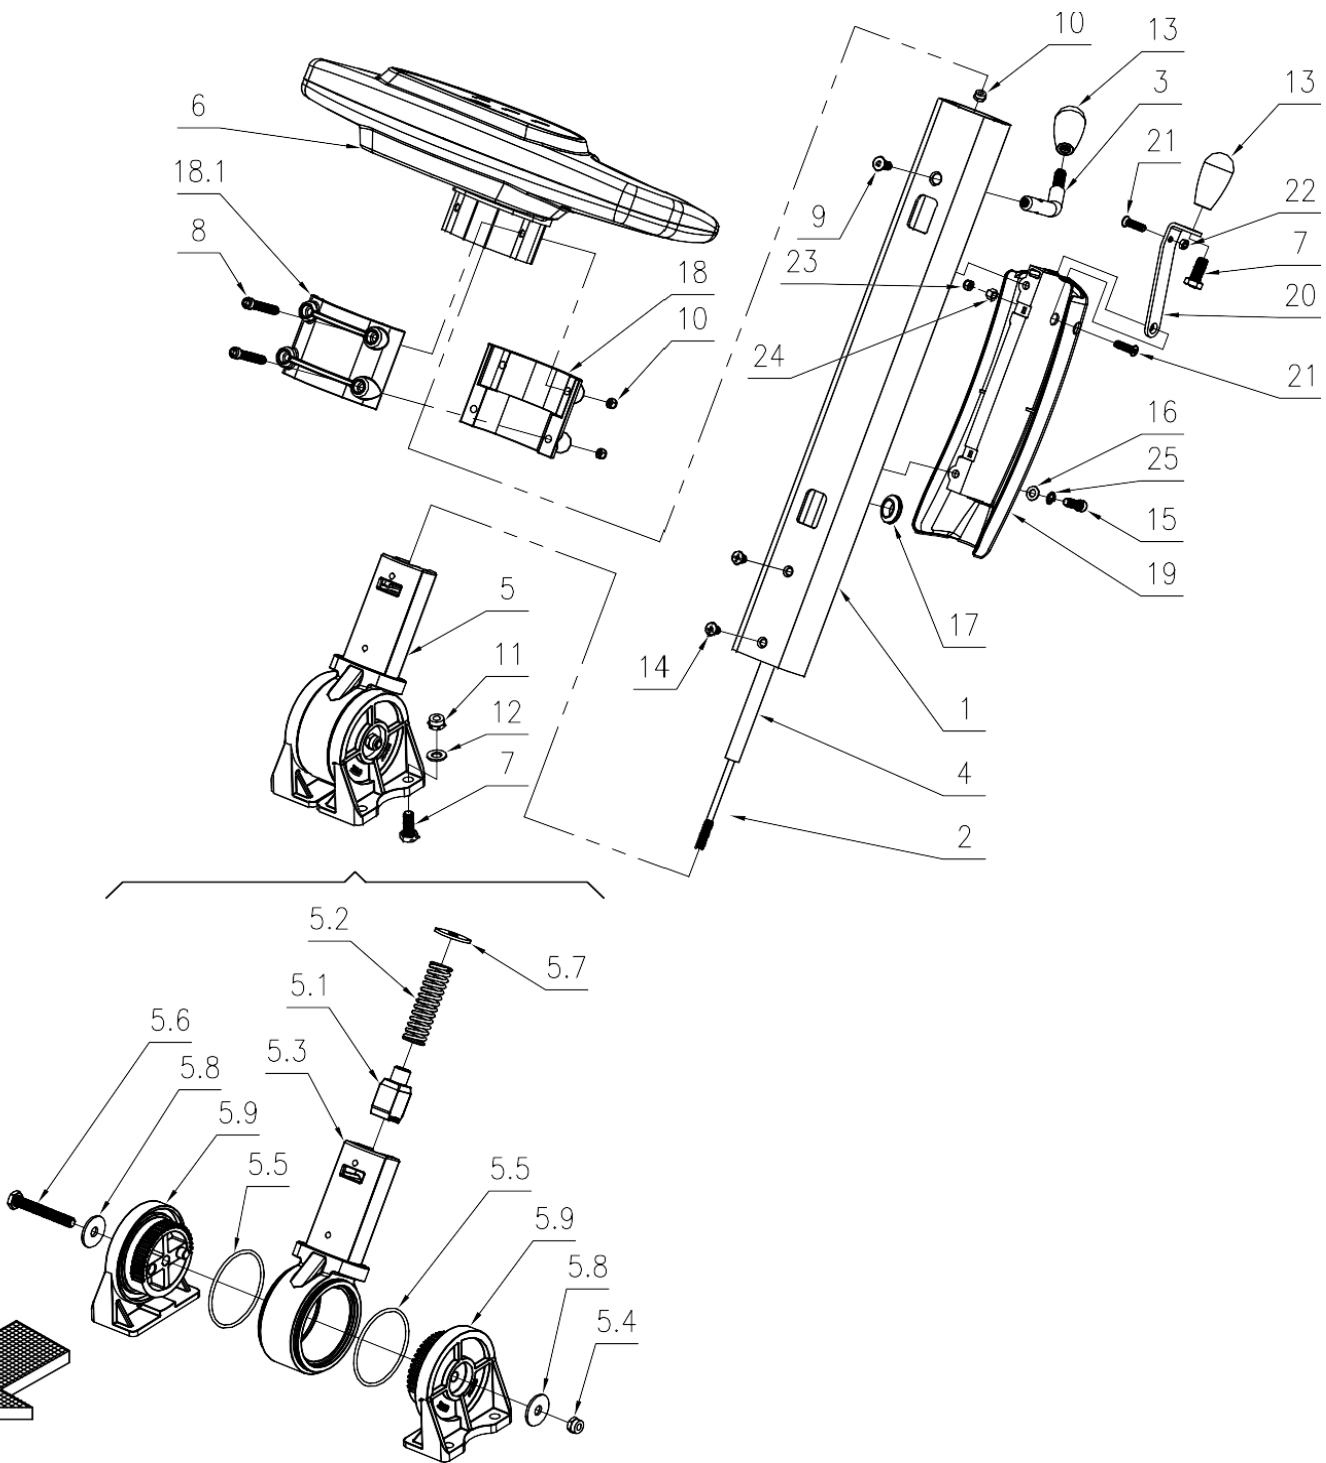


№	артикул	кол-во	наименование	примечание
25	GB/T 93-1987	2	washer	
24	350B-BR03	1	bushing	
23	GB/T 928-1980	1	nut	M5
22	GB/T 928-1980	1	nut	M5
21	GB/T 819.1-2000	2	screw	M5X20
20	3503-MZ13	1	knob	
19	50B-P14	1	pipe clip	
18.1	350B-AL05-01	1	support	
18	350B-AL05	1	support	
17	350B-P11	1	fairlead	
16	GB/T 97.1-2002	2	washer	∅6.2X∅12X1
15	GB/T 70.1-2000	2	screw	M6X20
14	GB/T 819.1-2000	2	screw	M6X10
13	530B-P34	2	knob	
12	GB/T 97.1-2002	4	washer	∅8X∅17X1.5
11	GB/T 928-1980	4	nut	M8
10	GB/T 928-1980	1	nut	M6
9	GB/T 70.3-2000	1	screw	M6X16
8	GB/T 70.1-2000	4	screw	M6X40
7	GB/T 5782-2000	5	screw	M8X20
6		1	handle bar assembly	
5.9	350B-AL02	2	support	
5.8	GB/T 97.1-2002	2	washer	∅8.5X∅28X2
5.7	GB/T 97.1-2002	1	washer	∅8X∅30X2
5.6	GB/T 5782-2000	1	screw	M8X60
5.5	350B-P50	2	O-ring	∅2.65X∅64.6
5.4	GB/T 928-1980	1	nut	M8
5.3	350B-AL03	1	joint	
5.2	350B-MZ11	1	spring	
5.1	350B-AL07	1	pin	
5		1	joint assembly	
4	350B-MZ22	1	protection tube	
3	350B-MZ09	1	lever	
2	350B-MZ10	1	lever	
1	350B-AL04	1	rotate rod	

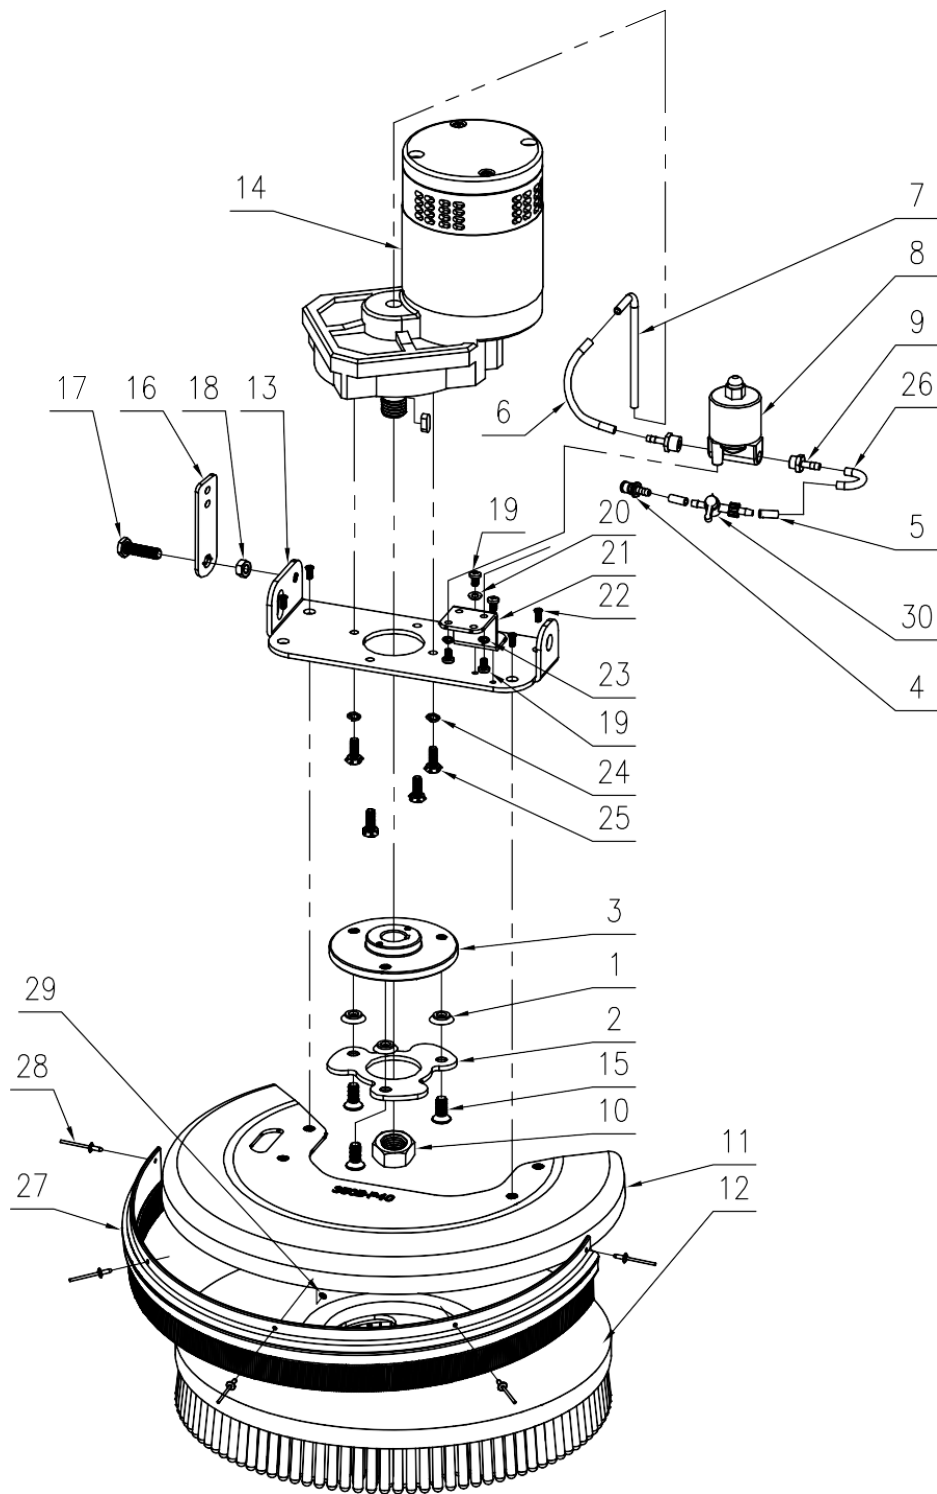


№	артикул	кол-во	наименование	примечание
30	350B-C14	1	flow control valve	
29	GB/T 97.1-2002	5	washer	Ø3.2XØ9X0.5
28	GB/T 12615-1990	5	core pulling rivets	Ø3.2
27	350B-P43	1	splash guard	
26	350B-BR09	1	elbow	
25	GB/T 5783-2000	4	screw	M6X16
24	GB/T 93-1987	4	washer	Ø6.1X1.6
23	GB/T 93-1987	4	washer	Ø5.1X1.3
22	GB/T 819.1-2000	4	screw	M4X10
21	350B-MZ07	1	solenoid valve base	
20	GB/T 97.1-2002	2	washer	Ø5.5XØ15X1
19	GB/T 818-2000	2	screw	M5X8
18	CB/T 6170-2000	1	nut	M8
17	GB/T 5782-2000	1	screw	M8X30
16	350B-MZ12	1	support	
15	GB/T 70.3-2000	3	screw	M8X20
14	350B-E01	1	brush motor	24V/350W/180RPM
13	350B-MZ01	1	brush motor base	
12	350B-P44	1	brush	D355
11	350B-P40	1	brush cover	
10	GB/T 6170-2000	1	nut	M20X15XS30
9	350B-BR08	1	1/4 connector	
8	530B-C16	1	solenoid valve	
7	350B-BR10	1	elbow	
6	350B-P54	1	pipe	Ø5XØ8X150
5	350B-P55	1	pipe	Ø5XØ8X90
4	350B-P45	1	pipe connector	
3	350B-MZ03	1	flv wheel	
2	530B-MZ04	1	flange	
1	530B-MZ05	3	spacer	

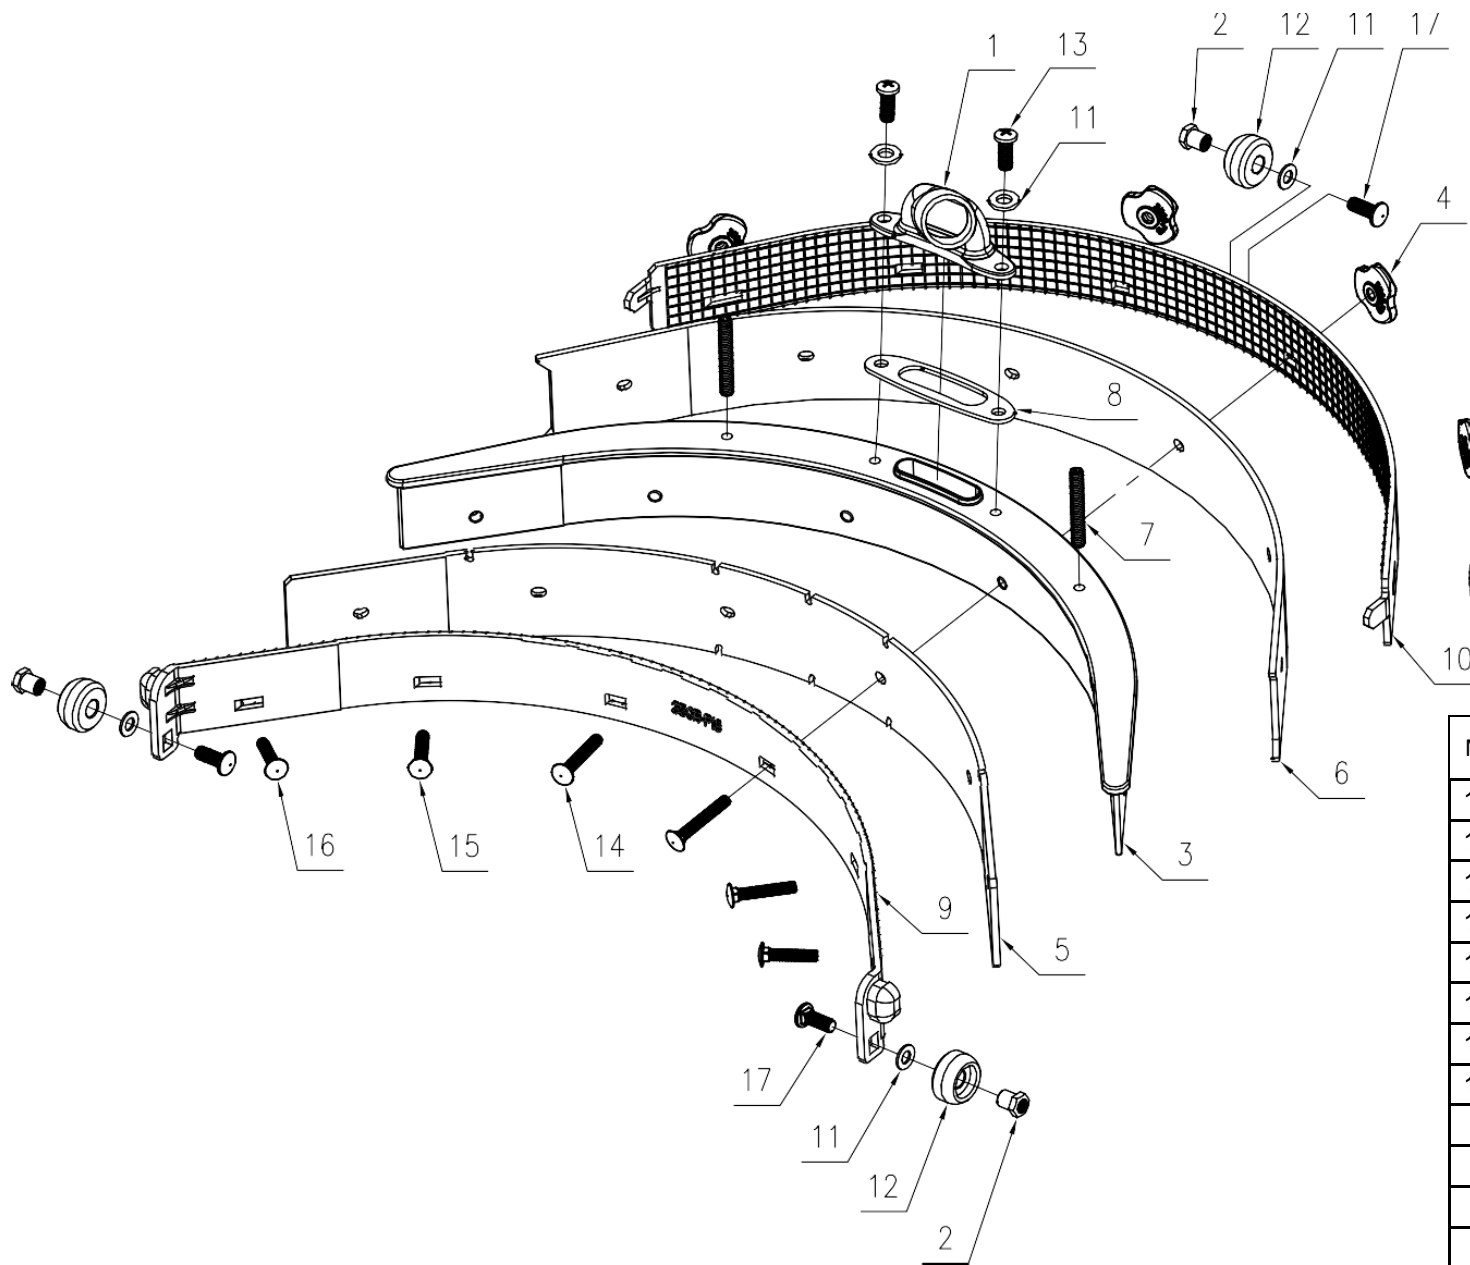

№	артикул	кол-во	наименование	примечание
17	GB/T 14-1998	3	screw	M6x16
16	GB/T 14-1998	2	screw	M5x25
15	GB/T 14-1998	2	screw	M5x30
14	GB/T 14-1998	2	screw	M5x35
13	GB/T 818-2000	2	screw	M6x16
12	350B-W02	3	wheel	D24x12.7
11	GB/T 97.1-2002	2	washer	Ø6.2xØ12x1
10	350B-P17	1	rear blade	
9	350B-P16	1	front blade	
8	350B-P22	1	gasket	
7	GB/T 77-2000	2	screw	M6x40
6	350B-P20	1	rear rubber	
5	350B-P19	1	front rubber	
4	350B-P18	6	blade button	
3	350B-AL01	1	squeegee body	
2	350B-BR01	3	bushing	
1	350B-P21	1	suction connector	

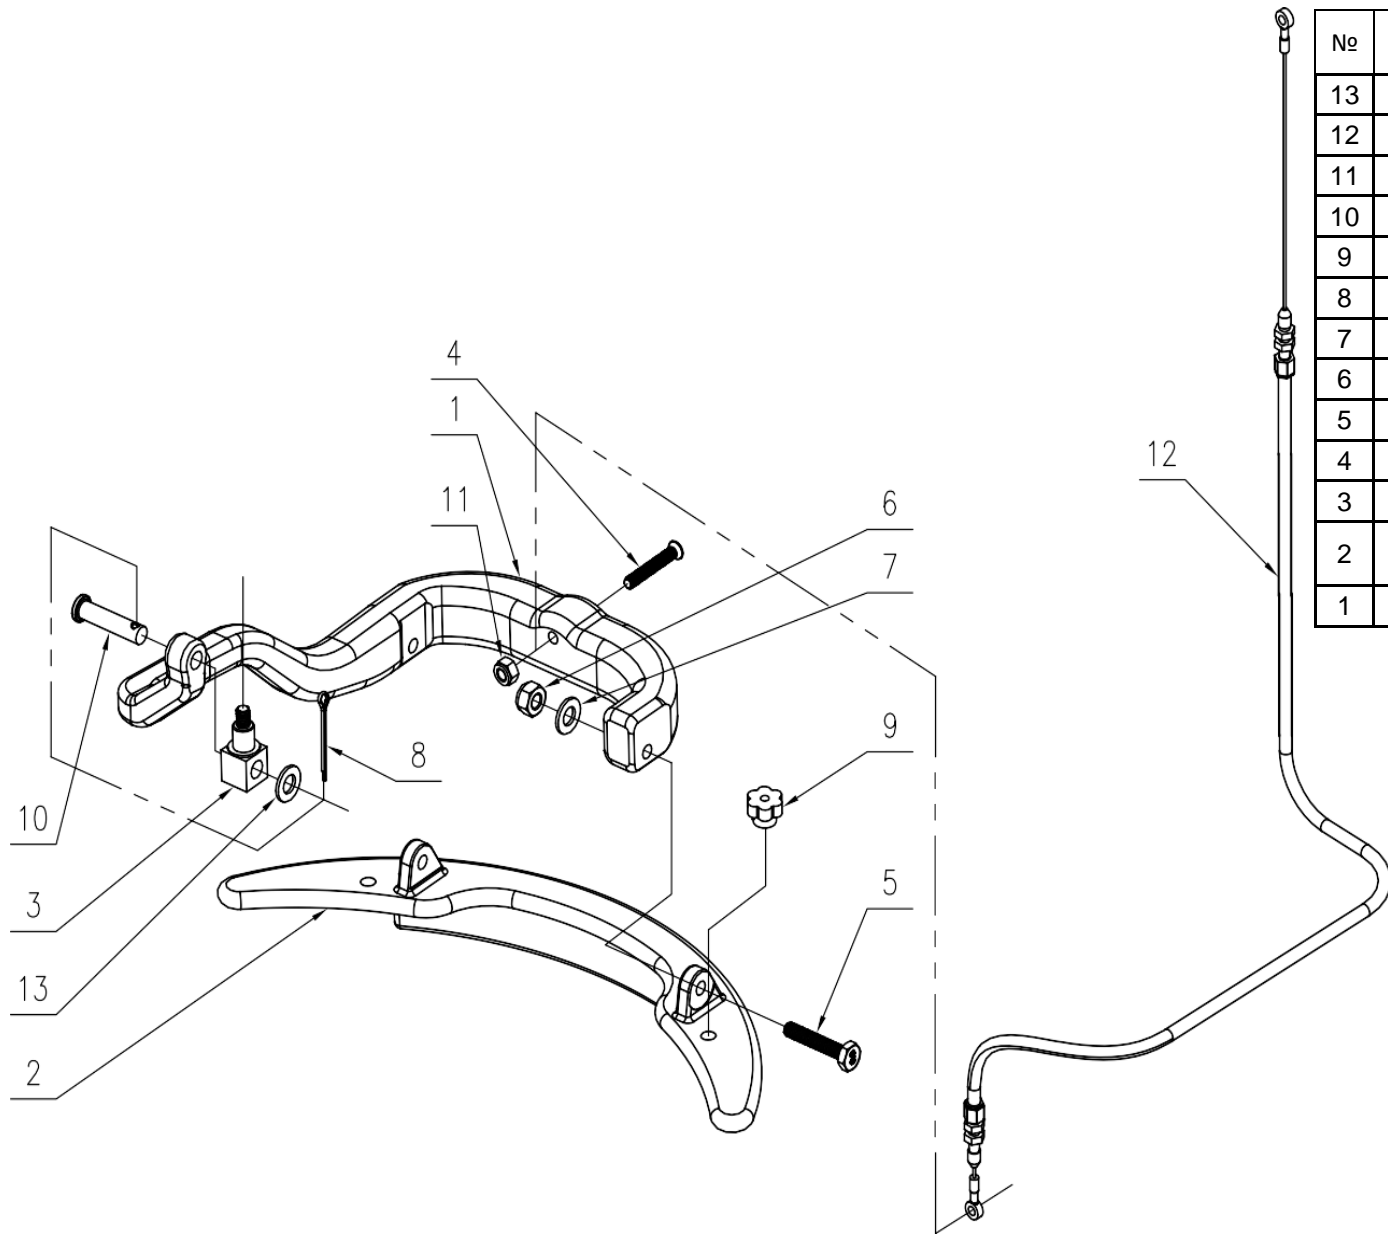

№	артикул	кол-во	наименование	примечание
13	GB/T 97.1-2002	i	washer	Ø8XØ17X1.5
12	350B-L01	i	steel rope	
11	GB/T 928-1980	i	nut	M5
10	GB/T 882-2000	i	pin	Ø8X35
9	530B-P41	2	M6 inserts	M6
8	GB/T 91-2000	1	pin	2.5X25
7	GB/T 97.1-2002	2	washer	Ø6.2XØ12X1
6	GB/T 928-1980	2	nut	M6
5	GB/T 5783-2000	2	screw	M6x35
4	GB/T 819.1-2000	1	screw	M5x35
3	350B-MZ05	1	coupling	
2	350B-MZ18	1	squeegee support	
1	350B-MZ17	1	arm	

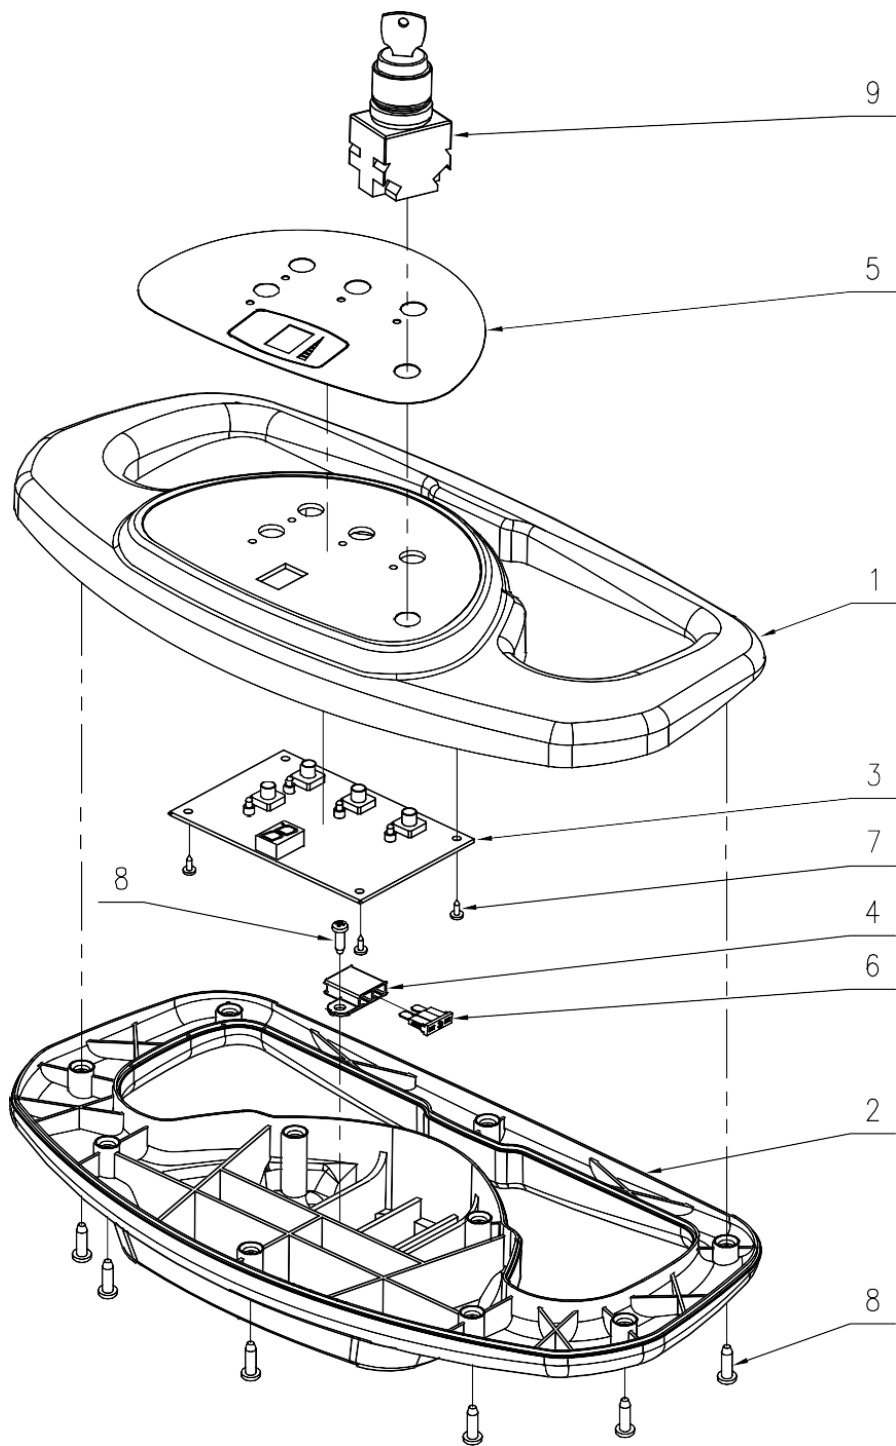

№	артикул	кол-во	наименование	примечание
9	350B-C18	1	key switch	
8	GB/T 15856.1-2002	11	screw	ST3.9X15
7	GB/T 15856.1-2002	4	screw	ST3.5X8
6	530B-C05	1	3A fuse	
5	350B-P51	1	label	
4	530B-P46	1	fuse box	
3	350B-C01	1	PCB	
2	350B-P03	1	handle bar body	
1	350B-P04	1	handle bar cover	